Wi-Fi Hand Penetration

A comparison of 2.4 and 5 GHz Wi-Fi signals ability to

penetrate a user's hand





Outline

- Problem and Basic Settings
- Import Geometries and Add Materials
- Prepare the Grid
- Adding Antenna Signal
- Boundary Conditions and Data Collection
- Running and Analyzing Results

XTech-X SIMULATIONS EMPOWERING INNOVATION



Problem and Basic Settings

A situation that most people encounter on a daily basis, is a small antenna situated in their hand.

Some simple questions:

X Tech-X

How do the signals from these antennas interact with the hand?

Which frequencies are blocked by the hand?





Problem and Basic Settings

We can simulate a similar situation to a cell phone antenna in VSim.

- Most cell phones communicate with ~850Mhz signals
- Wi-fi enabled devices use 2.4 or 5 Ghz signals

It's advertised that the 5 GHz signals from a wi-fi device have higher speeds at the cost of range and signal strength.

We can test that here in VSim.

XTech-X SIMULATIONS EMPOWERING INNOVATION



Problem and Basic Settings

To get started:

Open a new simulation and check the basic settings:

Length units = m

Dimensionality = 3

X Tech-X

Coordinate System = Cartesian

Field Solver = Electromagnetic

These settings should be the default values

Editor						
						Simulation Setup is Ready
antennaInHandWalkthrough.sdf antenr	aInHandWalkthrough.pre antennaInHandV	/alkthrough	ı.in			
Simulation		,	z v v z (z r phi) Propert	es View Solids	▼ Select Solid ▼ Too	ada Avas Barapactiva View +7 🔻
				c3 new bolido		Igle Axes [Perspective view]
+ Constants		6	8			
Barameter						
- Racic Settings			e S			
Eunctions			e qe			
- SpaceTimeEunctions		-	oat			
Matariala						
Geometries						
Meshes						
Grids						
Field Dynamics		_				
Histories						
Undo	Add Multiple Remove Add					
Property	Value					
 surface meshing tolerance 	0.5					
- cfl number	0.95					
time step	0.0				_ _	
number of steps	100				_	
steps between dumps	20	_				
dump in groups of	l devible					
precision	double					
use GPU (if found)	falce					
verbosity	information					
dimensionality	3					
grid spacing	uniform					
restore geometries	False					
- MPI decomposition	default					
- PEC	solid					
 coordinate system 	cartesian					
 field solver 	electromagnetic					
 background permittivity 	1.0		_			
dielectric solver	point permittivity					
- Cerenkov filter	none					
periodic directions	no periodicity					
collisions framework	no particles					
	no consions					



Constants and Parameters

X Tech-X

For most simulations it is useful to define many constants and parameters to allow for more flexibility and easier adjustments

Some of the constants can be seen in the figure on the right. All of their values can be found in the example

VSim - an	tennalnHandWalkthrough							_	
File Edit	Tools View Help								
	Editor								
								A Simulation Has Changed.	Save and Setup
X	*antennaInHandWalkthrough	sdf antennaInHandWalktbrough pre antennaInHau	dWalkth	rouah	in			-	
Welcome	Simulation		~						
				Vew	x,y,z (z,r,phi) Properties	View Solids	▼ Select Solid ▼ Toggle	e Axes Perspective View +z	Reset Position
4	FLEMCHARGE			Ŕ					
Setup	ELECMASS								
	- PROTMASS			se					
	- MUONMASS			tap					
Pro-	- KB			ã					
Kun	- EPSILON0								
\oplus	- C2								
	ELECCHARGE								
Analyze									
	GRIDXMIN								
	GRIDXMAX								
Visualize	GRIDYMIN								
	GRIDYMAX								
?	GRIDZMIN								
Help	GRIDZMAX		_						
	FREQ_5GHZ								
	FREQ_24GHZ							+	
	- Basic Settings								
	Functions								
	SpaceTimeEunctions		~						
		Undo Add Multiple Remove Ad	d						
	Property	Value							
	- kind	User Defined							
	description	240000000							
	Value	24000000							
🛕 Setup: 🖻	SIMULATION SETUP CHANGED	Save the setup for simulation changes to take effect							Show Log



Constants and Parameters

X Tech-X

Parameters are similar to constants although they can vary based on constants and other parameters

Some of the parameters can be seen in this figure on the right.

All of constants and parameters will be used to streamline and simplify our setup process.





X Tech-X

With all of the constants and parameters taken care of, we can create and import the geometries for the simulation.

We will be using an imported ".stl" file of a hand and several primitive objects to replicate things like bones in the hand.

To import the hand geometry, right click on "Geometries" and select "Import Geometries"





X Tech-X

Navigate to the "Hand.stl" file and select open.

VSim will ask if you want to resize the grid. This a good idea to get a good starting point for the grid size, although we will be modifying the grid size later.





X Tech-X

With the hand imported and the grid resized, we can start to see our simulation coming together.

Before we move on though, we need to scale the size of the hand.

The hand was designed using mm as the units. We can change the scale of the hand to 0.001 to account for this.

We also want to translate the hand so the origin in the palm.





X Tech-X

Next we need to add bones to our hand.

To do this we can add 5 simple cylinders to the hand.

Right click on "CSG" in the tree view and select "Cylinder" under "Add Primitive".

Each of the parameters used for each hand can be found in the example.

VSim - a File Edit	intennalnHandWalkthrough Tools View Help Editor		_				_		_		×
M	*antennaInHandWalkthrough.sdf	antennaInHandWalkthrough.pre	antennaInHandWalkth	rough.	n.in			A Simulation Ha	Changed.	Save and S	etup
Welcome Setup Run \bigcirc Analyze ? Help	Simulation Description Constants Parameters Basic Settings Functions SpaceTimeFunctions Materials Geometries Geometries Materials Geometries Materials CSG Materials CSG Materials Geometries Materials CAD Grid Grid Field Dynamics Histories Property kind tessellation	Undo Add Multiple Remov	Sphere Box Cylinder Cone Torus Pipe TruncCone Wedge	Database 3D View	x,y,z (z,r,phi) Properties	View Solids	Select Solid	Toggle Axes Perspective View	y +z •	Reset Pos	ition
🛕 Setup:	SIMULATION SETUP CHANGED Save	e the setup for simulation changes to ta	ke effect							Show Log	g



Materials

X Tech-X

Finally we need to add materials to our hand.

Unfortunately, bone and muscle are not included materials in VSim so we need to add them as custome materials.

To do this, we create a ".vmat" file and import it into our simulation

The ".vmat" file should look like the figure on the right.

You can now right click on "Materials" in the tree, select "Import Materials" and open this file.

Project	antennalnHandW
Image:	<pre>(Material Bone) (Strings) (Aterial Muscle) (Aterial Aterial Aterial) (Aterial Aterial Aterial (Aterial Aterial Aterial) (Aterial Aterial) (Aterial) (Aterial)</pre>



Materials

X Tech-X

Now the materials will appear in the database tab on the right side of the setup window.

Select the bone and muscle material and select "Add To Simulation"

Simulation		^	ě			ant	ennaInHandWalkthro	ough.vmat 🔻 Ren	nove File Add
Description			l	Name	kind	heat canacity	conductivity	lative permittiv	i erməl condu
Constants				Name	KIIIG	near capacity	conductivity	lative permittiv	r ermarcondu
Basic Settings			S.	Bone	dielectric	2300	0.4	2.5	0.5
Functions			aba	Mussla	dialactric	2420	0.62	57	0.5
SpaceTimeFunctions			<u>S</u>	muscie	dielectric	5420	0.05	57	0.5
 Materials 				-					
Bone				<u> </u>					
Muscle									
 Geometries 									
CSG									
- <mark>∕</mark> thumb									
- 🗹 pointer					\mathbf{N}				
🗌 🗌 🗹 middle									
ring					•				_
pinky									
HandGeom									
Meshes									
Grid Dynamics									
Field Dynamics		~							
HISTORIES			-						
	Undo Add Multiple Remo	Add Add	_						
Property	Value		1						
rioperty	value								
4									



Materials

X Tech-X

To apply the materials to the hand cylinder, simply select the geometry of interest and under material choose the appropriate material.





Simulation Grid

X Tech-X

For a successful simulation, we need to make sure our grid encompasses the entire region.

This can be done using the constants that were set earlier.

With the "Grid" selected, right click the values of each property and select the appropriate constant.

🚺 VSim - antennalnHandWalkthrough	- 0	\times
File Edit Tools View Help		
Editor		
V	Simulation Has Changed. Save and Se	tup
*antennaInHandWalkthrough.sdf antennaInHandWalkthrough.pre antennaInHandWalkth	'alkthrough.in	
Welcome Simulation	Select Solid ▼ Toople Axes Perspective View +Z ▼ Reset Posit	ion
- Description		
Constants	H K	
Setup Parameters		
Basic Settings		
Functions	at at	
Run FaceTimeFunctions		
Materials		
Geometries		
Analyze		
Field Dynamics		
Histories	AMP	
Visualize		
	CDIFAC	
Help	ELECCHARGE	
	ELECMASS	
	ELECMASSEV	
	ELEMCHARGE	
	EPSILONO	
	FREO 24GHZ	
Undo Add Multiple Remove Add	FREO 5GHZ	
Prove Name	GRIDXMAX	
Property Value	GRIDYMIN	
	GRIDYMAX	
yMin GRIDYMIN	GRIDYMIN	
yMax GRIDYM Assign Constant	GRIDZMAX	
zMax 0.049346 Assign Parameter	r 🕨 GRIDZMIN	
xCells 3	KB	
yCells 4		
zCells 5		
	MUU	
	MUONMASS	
	PI PI	
A Setup: SIMULATION SETUP CHANGED Save the setup for simulation changes to take effect	PIO2 Show Log	



Simulation Grid

X Tech-X

The values for NX, NY, NZ were chosen by setting the parameter RESOLUTION

RESOLUTION is the length that can be resolved by the simulation so: $NX = \frac{GRIDXMAX - GRIDXMIN}{RESOLUTION}$

Euror										A circulation in	channel 0
*antennaInHandWalkthrough sdf		antennaInHandWalkt	brough	in						Simulation Has	Changed. Save a
e Simulation	anterinazi inana waiku irougn.pre	antermatrinariowakt				Mary Calida	- 0				
			Ve.	x,y,z (z,r,phi)	Propertie	view Solids	▼ 56		Toggle Axes	Perspective View	+z ▼ Rese
Description			l é								
Constants					_						
Parameters Pasia Cattings			e e								
Europtions			abas								
SpaceTimeEunctions			Data								
Materials											
Geometries											
Mechec											
- Gride											
Field Dynamics											
Histories				AMP							
e				~							
				02							
				CDTFAC							
				ELECCHAR	IGE					40	
				FLECMASS			1 A.				
				ELECTION ALOS			1				
				ELECMASS	EV						
				ELEMCHA	RGE					1	
				EPSILON0							
				FREQ_24GH	нz						
Un	ndo Add Multiple Remo	ove Add	-	FREQ_5GH	z 🗌			- 1 - C			
Property (Value		1	GRIDXMAX	C 🔤						
- lind	Value			GRIDXMIN							
x Min	GRIDXMIN			CDIDVA	,						
- xMax	GRIDXMAX			GRIDYMAX	·						
— yMin	GRIDYMIN			GRIDYMIN							
— yMax	GRIDYM,	Assign Constant	•	GRIDZMAX	(
zMin	-0.008550	Assign Parameter	•	GRIDZMIN							
	0.049346	. asign r arameter		KD							
vCells	4			KB							
zCells	5			LIGHTSPEE	D						
				MU0							
				MUONMA	22						
				A NO CHINA	~						



To create the current source of the signal, we need to define a few SpaceTimeFunctions

source: Simple sin wave at the frequency of interest (FREQ_USED)

turnOn: A sin^2 function that allows the signal to slowly ramp up in time

turnOnSource: the two signals multiplied together.



Plot of the antenna current over time. This has a RISETIME of 10 periods.

XTech-X SIMULATIONS EMPOWERING INNOVATION



X Tech-X

These functions can be added by right clicking "SpaceTimeFunctions" and selecting expression.

For example the source function would take the following form

 $AMP * sin(2 * PI * FREQ_USED * t)$





X Tech-X

Lastly, we need to apply this signal to a region in the palm of the hand.

For this we can navigate to "Field Dynamics" and right click "CurrentDistributions" to add a "General Distributed Current" to the simulation.





X Tech-X

We can give this new current distribution the parameters given in the example

We can also apply our antenna signal to the y component of the antenna.





Boundary Conditions

Finally we need to add boundary conditions to our simulation

In this case we want all 6 boundaries of the simulation to be "open"

To do this, under "Field Dynamics" right click "FieldBoundaryConditions" and add 6 "Open" field boundary conditions

X Tech-X

🚺 VSim - antennalnHandWalkthrough	- 🗆 X
File Edit Tools View Help	
Editor	
	A Simulation Has Changed. Save and Setup
Welcome Cimulating	
	X = X,Y,Z (Z,F,phi) Properties View Solids ▼ Select Solid ▼ Toggle Axes Perspective View +Z ▼ Reset Position
• Constants	
Setup + Parameters	
Basic Settings	
Functions	the second
SpaceTimeFunctions	
Run source	
C turnOn	
turnOnSource	
Analyze Materials	
Geometries	
Meshes	
Visualize Field Dynamics	
Fields	
FieldBoundaryCondition	Boundary Launcher
open0	Coaxial Waveguide
Help	Matched Absorbing Layer
open2	Open
open3	Defet flexic Conductor
open4	Perfect Electric Conductor
CurrentDistributions	Perfect Magnetic Conductor
	Perfectly Matched Layer
Undo Add Multiple Remove	Port
	Port Launcher
Property Value	Rectangular Waveguide
Their boundary condition	
A Setup: SIMULATION SETUP CHANGED Save the setup for simulation changes to take effect	Show Log



Boundary Conditions

Select all 6 possible boundaries:

Lower x Lower y Lower z Upper x Upper y Upper z

X Tech-X





Far Field Box

X Tech-X

Lastly, because we are interested in the far field behavior of the antenna, we should include a "Far-Field Box Data"

This can be done by right clicking "Histories" then choosing "Far-Field Box Data" under "Add ArrayHistory"





Far Field Box

X Tech-X

Under volume select "cartesian 3d slab" and select values that encompass the hand

For the start and end time, we can assign our parameters defined earlier.

Leant 1001s	or tennaInHandWalkthrough.sdf		_								
keome Simu keome Contraction keome Contraction k	tennaInHandWalkthrough.sdf										
koome koome Simu tup tup tup tup tup tup tup tu	tennaInHandWalkthrough.sdf				_	_	_	_			
ecome stup etup etup etup etup etup etup etup etup etup etup etup etup etup etup etup etup	tennaInHandWalkthrough.sdf								Simulation Has C	nanged. Save	and
Simu Simu Come Simu Come Come Simu Come Come Simu Come Come Simu Come Come Simu Come		antennaInHandWalkthrough.p	re antennaInHandWalkt	hrough.in							
	ulation			≤ x.v.z (z.r.phi)	Properties	View Solids	 Select Solid 	Toggle Axes	Perspective View	+z 🔻 Res	et Po
• (tup • F	Description			S S				- Toggie Axes	respective new		_
	Constants			R							
	Parameters										
F F	Basic Settings			e S							
° 📃 S	Functions			aba							
	SpaceTimeEunctions			Dat							
	source										
	- turnOn										
2	turnOnSource										
	Materials										
yze	Geometries										
	Mechec										
	Gride										
	Eield Dumennies										
	Field Dynamics										
	 Fields Eight Devenden Conditions 	-									
	Current Distributions	2									
P	CurrentDistributions										
	Listaria										
	farEigldPov0										
				DL							
				DT							
				01							
		I to day and a database of the		FARFIELD_STAR	RT						
		Undo Add Multiple H	Remove Add	FARFIELD_STO	Р						
Pror	perty	Value		FREQ_USED							
	kind	Far-Field Box [Data	LX							
- (description			IV							
- 5	start time	FARFIELD_	Assign Constant								
	end time	1.0	Assian Desenator	LZ		<u> </u>					
	volume	cartesian 3	Assign Parameter	NX							
	xMin	-0.1		NY							
	xiviax	-0.05									
	vMax	0.13		NZ							
	- zMin	-0.05		OPTICAL_PERIO	OD D						
	zMax	0.01		RESOLUTION							
				DISCTING							
				KISE HIVE							
				TIME_STEPS							
tup: SIMUL	ATION SETUP CHANGED Sa	ve the setup for simulation change	s to take effect	TOTAL_TIME						Shr	owL



Running

Now select the "Run icon on the far left of the screen as save the setup if needed.

Set the number of steps to the value under the parameter "TIME_STEPS"

Choose a value of "Dump Periodicity" that makes sense for you. This example used about 1/10 the number of time steps to get about 10 dumps

And finally select "Run"

X Tech-X

VSim - antennalnHandWalkthrough File Edit Tools View Help Runtime Options Logs and Output Files Run Dump and Stop Force Stop Clear Log These options override values calculated or set in the Setup Tab Engine Log File Browser Welcome Time Step 1.9258332015464706e-12 Deleting domain. OUTPUT SUMMARY: Ø Default Value (1.9258332015464706e-12) There were 1 Notices encountered in this run. Number of Steps 3463 There were 0 Warnings encountered in this run. See above for more information. Default Value (100) VORPAL completed at clock time 2020-07-31-16:55:21.353. ۵. Dump Periodicity 346 NOTE: A VSimEM or VSimMD or VSimPD license was needed to run this simulation No expand symbols file. Will not limit expansion. Default Value (20) Importing antennaInHandWalkthrough from C:\Users\twager\Documents\tutorials\antenna in hand walkthrough. Run Importing verbosity from C:\Program Files\Tech-X\VSim-10.1.0\Contents\engine\share\macros. Reset to Setup Values € Importing mathphys from C:\Program Files\Tech-X\VSim-10.1.0\Contents\engine\share\macros. Importing VSim from C:\Program Files\Tech-X\VSim-10.1.0\Contents\engine\share\macros. Additional Run Options Importing listUtilities from C:\Program Files\Tech-X\VSim-10.1.0\Contents\engine\share\macros. Analyze Importing logicals from C:\Program Files\Tech-X\VSim-10.1.0\Contents\engine\share\macros. Restart at Dump Number Importing units from C:\Program Files\Tech-X\VSim-10.1.0\Contents\engine\share\macros. Dump at Time Zero Importing utilities from C:\Program Files\Tech-X\VSim-10.1.0\Contents\engine\share\macros. Importing vputilities from C:\Program Files\Tech-X\VSim-10.1.0\Contents\engine\share\macros. No Particle Sorting Importing VSimEm from C:\Program Files\Tech-X\VSim-10.1.0\Contents\engine\share\macros. Custom Run Options Importing embcs from C:\Program Files\Tech-X\VSim-10.1.0\Contents\engine\share\macros. Importing plasmaDielectric from C:\Program Files\Tech-X\VSim-10.1.0\Contents\engine\share\macros. ? Parallel Run Options Importing esmatrix from C:\Program Files\Tech-X\VSim-10.1.0\Contents\engine\share\macros. Importing matrices from C:\Program Files\Tech-X\VSim-10.1.0\Contents\engine\share\macros. Run in Parallel Importing grids from C:\Program Files\Tech-X\VSim-10.1.0\Contents\engine\share\macros. Disable Per-Rank Output Importing timing from C:\Program Files\Tech-X\VSim-10.1.0\Contents\engine\share\macros. Physical Cores on Machine: 4 Importing shapes from C:\Program Files\Tech-X\VSim-10.1.0\Contents\engine\share\macros. Importing multifields from C:\Program Files\Tech-X\VSim-10.1.0\Contents\engine\share\macros. Number of Cores 4 Importing histories from C:\Program Files\Tech-X\VSim-10.1.0\Contents\engine\share\macros. Importing stfuncs from C:\Program Files\Tech-X\VSim-10.1.0\Contents\engine\share\macros. Importing emfilters from C:\Program Files\Tech-X\VSim-10.1.0\Contents\engine\share\macros. Lines from 'antennaInHandWalkthrough.pre' processed. Finished with 'antennaInHandWalkthrough.pre'. ----- END ENGINE OUTPUT -----Notices NOTICE: in VpGridBndry::calculateTriangleData(), no cell corner inside the absorber could be found! Interiorness calculations may be incorrect in cell 42 33 38 Engine completed successfully. To see results, click on the "Visualize" icon in the icon panel. Run: SUCCESS Simulation engine finished successfully Show Log



Visualization

X Tech-X

One way to visualize this data is to select the following data:

Scalar data -> E Magnitude Geometries -> poly (HandGeomSolid)

And take a cross section of the data by selecting "Clip All Plots" in the lower left panel.

Clicking the "Colors" icon along the top of the page we can set the maximum of the color scale to be around 500.

We can then scroll through the dumps and observe how the signal penetrates the hand.





Visualization

X Tech-X

Another visualization we can do is create a far field analysis using the "computeFarFieldFromKirchhoffBox" analyzer.

VSim - antennalnHandWalkthrough			– 🗆 🗙
File Edit Tools View Help Window			
Analysis <u>C</u> ontrols	Analysis <u>Results</u>		
Search:	computeFarFieldFromKirchhoffBox.py		
Welcome Available Analyzers: Open		Analyze Stop	Clear Output
Welcome Available Analyzers: Open addSpecies/WithKinEnrginEV.py annotateSpeciesAbsPtcIData2.py annotateSpeciesAbsPtcIData2.py annotateSpeciesDataOnPlane.py computeSean2ModeCoupling.py computeSean2ModeCoupling.py computeSean2ModeCoupling.py computeSean2ModeCoupling.py computeSean2ModeCoupling.py computeSean2ModeCoupling.py computeSean2ModeCoupling.py computeSean2ModeCoupling.py computeSean2ModeCoupling.py computeFarFieldRadation.py computeFarFieldRadation.py computeFarFieldRadation.py computeFieldMaxAmplitude.py computeFieldMaxAmplitude.py computeFieldMaxAmplitude.py computeFieldMassFut.py computeFieldMassFut.py computeFieldMassFut.py computeFieldMassFut.py computeFieldInaperSpectrum.py computeSpectrogram.py computeSpectrogram.py computeSpectrogram.py computeSpectrogram.py computeTimeSeriesEmplitude.py computeTimeSeriesEmplitude.py computeSpectrogram.py computeSpectrogram.py computeTimeSeriesEmplitude.py computeTimeSeriesEmplitude.py computeSpectrogram.py computeSpectrogram.py computeTimeSeriesEmplitude.py computeTimeSeriesEmplitu	simulationName antennaInHandWalkthrough fieldLabel E farFieldRadius 10 numPeriods 0.25 numFarFieldTimes 2 frequency 2.4e9 incidentField numTheta 60 numPhi 120 zeroThetaDirection (0,0,1) zeroPhiDirection (1,0,0)	AnalyzeStopOutputsTxsYeeFarFieldField::readFieldRistoryH5:fieldLowerBounds: [10,105,25] TxsYeeFarField::readFieldHistoryH5:fieldUpperBounds: [96,107,55]Finished loop over: 2 far point times.TxsYeeFarField::readFieldHistoryH5:fieldUpperBounds: [10,10,24] TxsYeeFarFieldField::readFieldHistoryH5:fieldUpperBounds: [96,106,26]Finished loop over: 2 far point times.TxsYeeFarFieldField::readFieldHistoryH5:fieldLowerBounds: [10,10,54] TxsYeeFarFieldField::readFieldHistoryH5:fieldUpperBounds: [96,106,56]Pinished loop over: 2 far point times. Writing antennaInHandWalkthrough_farE_0.vsh5 Writing antennaInHandWalkthrough_farE_1.vsh5 Begining least-squares analysis farFieldDt = 5.200333333333334e=11 simulationDt = 3.659003029384264e=12 Reading antennaInHandWalkthrough_farE_1.vsh5 Reading antennaInHandWalkthrough_farE_1.vsh5 areaTotal = 12.5664, E2total = 1.03721, sin2Avg = 0.66659	Clear Output
convertPtclComponentsCartToCy(X,py convertPtclComponentsCartToCy(Z,py createMissingPtclsDumps.py		History file, antennaInHandWalkthrough_PdBi4RCS.vsh5, written.	
createParticleTracks.py		Analysis completed successfully	
Import Custom Analyzer			•
Analyze: ANALYZER SUCCESS Analyzer finishe	d successfully		Show Log



Visualization

X Tech-X

Back on the visualize page, reload the data in the top right of the window.

Turn off the E Magnitude data and uncheck the "Clip All Plots"

You should obtain a picture that look similar to the one here.

🕅 VSim - antennalnHandWalkthrough — 🛛 🖸	x c
File Edit Tools View Help Window Add a Data View • Reir	oad Data
Vertication Controls Vertication Controls	
Annotation Level: Axes & Legends	10
Visualize: READY Visualization available	ow Log



Answering our Question

X Tech-X

Finally let's test the assertion that 2.4GHz signals have better "range" by comparing how the fields travel through the hand compared to the 5GHz signal.

Because we prepared our simulation using constants and parameters, we can simply change the parameter FREQ_USED to the FREQ_24GHZ constant and rerun our simulation.

The same analysis should yield the following far field

VSim - antennalnHandWalkthrough File Edit Tools View Help Window Add a Data View 💌 Reload Data Data Overview 🛛 Variables Save Image | Labels | Axis Scale | Rendering | Reset View | Preserve Aspect Ratio | Auto Reset Setu Scalar Data B ÷-D Run ÷-E Menh Var Handlikonsisidi kapped Polysbaio z ⊕−farE Θ Pseudociolor Vaz Pal3 HandGeomSolid 10 -5 E invEps ÷-J E-lossFactor middle PdB pinky e pointer E ring + thumb Hector Data Meshes Through Out from hand palm Clip Plot Plane Controls Log Scale Color Display Contours 5 Opacity Color Table hot_desaturated • Limits Set Minimum -12 3367 Dump: 0 Annotation Level: Axes & Legends • 0 10 Show Log Visualize: READY Visualization available



Answering our Question

X Tech-X

Comparing these two far field results, it is clear to see that the 2.4GHz signal (top) actually does have a more uniform distribution of the signal and clearly penetrates the hand more effectively.

Although the relative strength of the signal is much less than the one highly directional lobe of the 5GHz signal.



2.4 GHz

5 GHz

